





Technical information Professional SportPoint - Upperbody inclusive



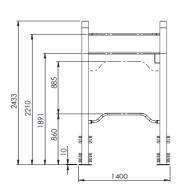

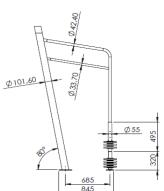

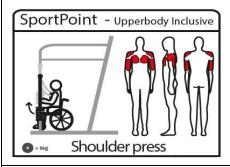






Upperbody inclusive	The basic excercise is Shoulder press, follow the instruction pictogram. Many alternative excersises are possible on the Upperbody inclusive. Check out the QR code that leads to all
	training possibilities.
Accessories	Sticker with instruction pictogram and QR code
	Bench and posts hot zinc flame sprayed protected and Gris Sable 2400 textured powder coated steel. The beams are stainless steel 304, ceramic pearled. Inlay part
Material	and tops textured powder coated steel plate in many different colours. Floor parts are hot dipped galvanized and coated with 10-15 mm black wet pour.
Dimensions material	Round tubes/handles: Ø 42,4 x 3 mm / Ø33,7 x 3 mm
	Floor: 2400 x 1720 x 60 mm
	Posts: Ø 101,6 x 2,75 mm
area of movement	18,5 m2. This does not apply when Sportpoint floors are connected.
fall protection	not needed
Weight:	154 kg (incl. weights) Floor = 155 kg
Assembly	Preassembled sections - Optional: mounted on own floor
free heigt of fall	0 mm
intended for	adults and youth > 1400 mm

each side has 7 adjustable weights of 5 kg per piece - optional is weights of 2 kg each - the empty bar weighs 10kg, this is the start training resistance

each side has 7 adjustable weights of 2 kg per piece - the product is smaller, please check the stack drawing Asian version Installation directly on concrete (not tarmac)

Anchoring


weights



Installation with own floor part in soft surface



on concrete: with supplied wedge anchors and screws on tarmac: with chemical anchoring (not supplied)

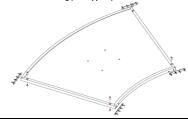

When 3 or more floors are connected no anchoring into the ground is needed EN16630:2015 - for permanently installed outdoor fitness equipment Certification:

Notice:

Not intended for children < 1400 mm

The Denfit Professional equipment should not be used if you are suffering from physiological problems. Avoid exaggerated physical exhaustion. In case of doubt please contact your doctor before use. Inspect the equipment before use. Don't use it if it appears damaged or inoperable.

> E-mail: info@denfit.nl WWW.DENFIT.NL Denfit - The Netherlands